


PARTS LIST

426, 426A, 426B 426C

INSTANT LIGHTING GASOLINE
CAMP STOVE (THREE BURNER)

COLEMAN STOVES

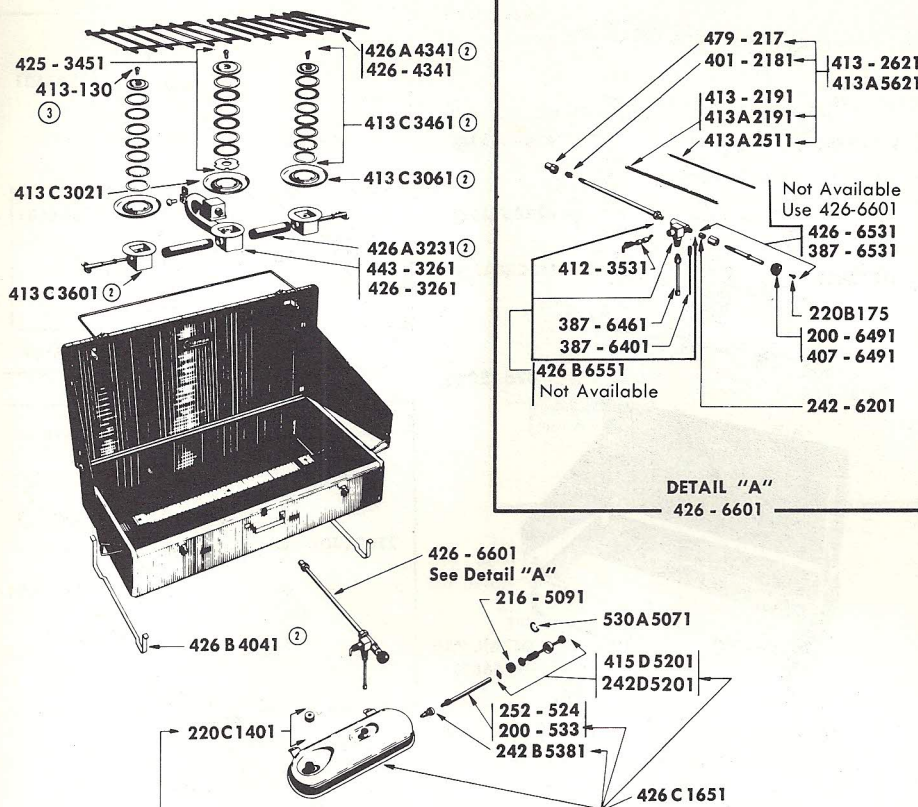

DETAIL "A"
426 - 6601


- ② Quantity of Parts Used in Assembly
③ Quantity of Parts Used in Assembly

Parts Not Shown:
471 - 2381 Needle and Holder
118B1361 Filler Cap Gasket


MODEL 426C SHOWN

MODEL	FINISH (Enamel)	BURNERS	DISTANCE BETWEEN CENTERS	TANK CAPACITY (In Pints)	DIMENSION (Folded — In Inches)		
					Height	Width	Depth
426	FOREST GREEN ALL MODELS	3	9 1/4"	3 1/2	6 1/2	28 3/8	14
426A		3	9 1/4"	3 1/2	6 1/2	28 3/8	14
426B		3	9 1/4"	3 1/2	6 1/2	28 3/8	14
426C		3	9 1/4"	3 1/2	6 1/2	28 3/8	14


(All Models Discontinued)

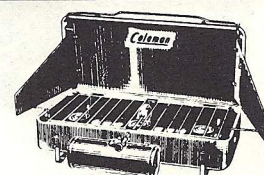

Model 426, 426A

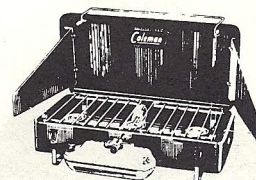

Model 426B

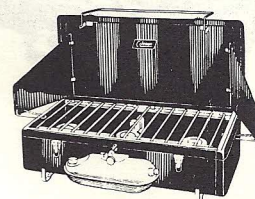

Model 426C

PART NO.	DESCRIPTION	USED ON	PART NO.	DESCRIPTION	USED ON
8B119	Forest Green Enamel — Pressurized Spray		413A2511	Needle Assembly	426B, 426C
8B147	Red Lacquer — Pressurized Spray	Tank	413A5621	Generator	426B, 426C
118B1361	Filler Cap Gasket — Used only with 220B1401, 220C1401 Cap with Disc		413C3021	Master Burner Bowl	
220 - 533	Air Stem	426B, 426C	413C3061	Aux. Burner Bowl	
200 - 6491	Valve Wheel	426B, 426C	413C3461	Aux. Burner Cap and Fillers	
216 - 5091	Pump Cup		413C3601	Valve Stem (Aux. — Br. Body with Valve)	
220 - 6361	Filler Cap Gasket & Disc Ass'y. — Discontinued		415D5201	Pump Plunger Assembly — Sub 242D5201	426, 426A
220B175	Self-Tapping Screw (#4 — 40 x 5/16")		425 - 3451	Master Burner Cap and Fillers	
220C1401	Filler Cap, Complete		426 - 3261	Master Burner Body	426, 426A
242 - 6201	Valve Stem Packing		426 - 4341	Grate	426
242B5381	*Check Valve		426 - 6531	Valve Stem Assembly	426B, 426C
242D5201	Pump Plunger Assembly	426B, 426C	426 - 6601	Valve and Generator, Complete	
252 - 524	Air Stem	426, 426A	426A3231	Manifold Pipe	
387 - 6401	Block and Needle Assembly		426A4041	Leg — Replaced by 426B4041	426A, 426B
387 - 6461	Tube Assembly (Fuel and Air)		426A4341	Grate	
387 - 6531	Stem Assembly — Use 426-6601	426, 426A	426B4041	Leg	426B, 426C
401 - 2181	Gas Tip (Marked "B")		426B6551	Valve — Not Available — Use 426-6601	426B, 426C
407 - 6491	Valve Wheel	426, 426A	426C1651	Tank (Less Generator and Valve)	
412 - 3531	Tip Cleaner Stem		443 - 3261	Master Burner Body — Sub 426-3261	426B, 426C
413 - 2071	Valve Body — Use 426-6601	426, 426A	471 - 2381	Needle and Holder	426, 426A
413 - 2191	Generator Coil	426, 426A	479 - 217	Tip Protector	
413 - 2621	Generator — Replaced by 426-6601	426, 426A	530A5071	Pump Cap Clip	
413A207	Valve Body — Use 426-6601	426B, 426C			
413A2191	Generator Coil	426B, 426C			